Living Art Range

Model: LVA231

Model: LVA232

08/19605/0 (UK) Issue 0

CE Products comply with the European Safety Standard: EN 60335-2-30 and the European Standards for Electromagetic Compatibility (EMC) EN55014-1 / A2: 2002 and EN55014-2:2003 which cover the essential requirements of EEC directives 73/23 and 89/336 - Patents pending No. 05104792.6 and No. 05104794.2

1

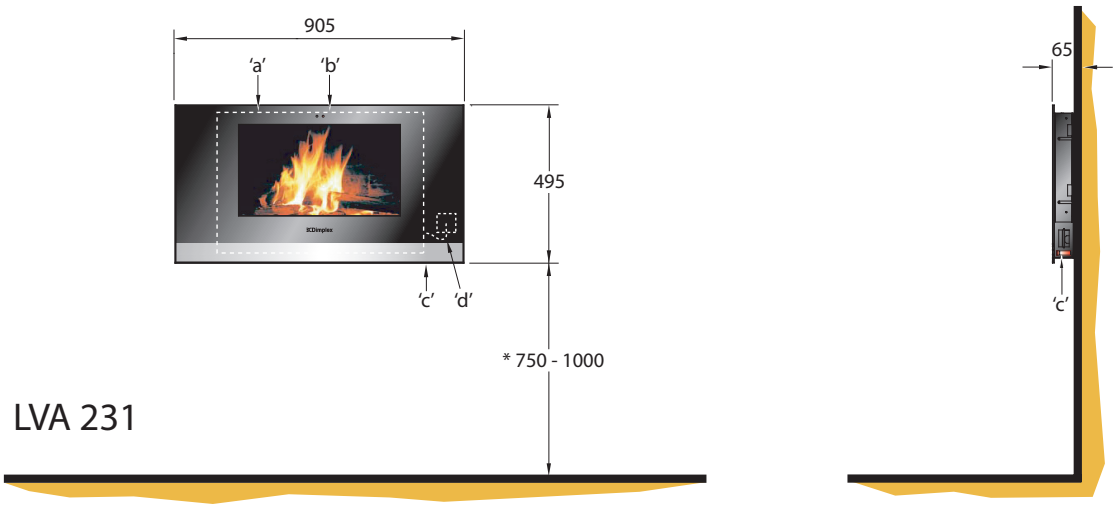

LVA 231

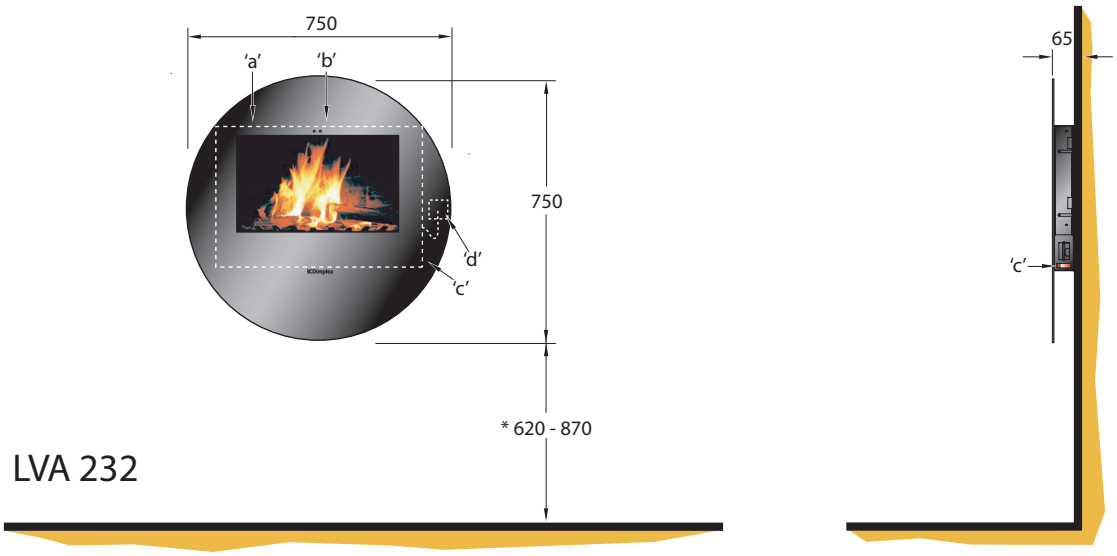

LVA 232

2

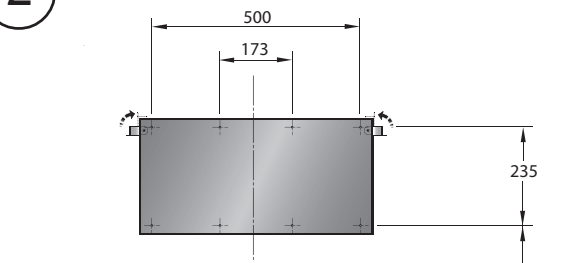

3

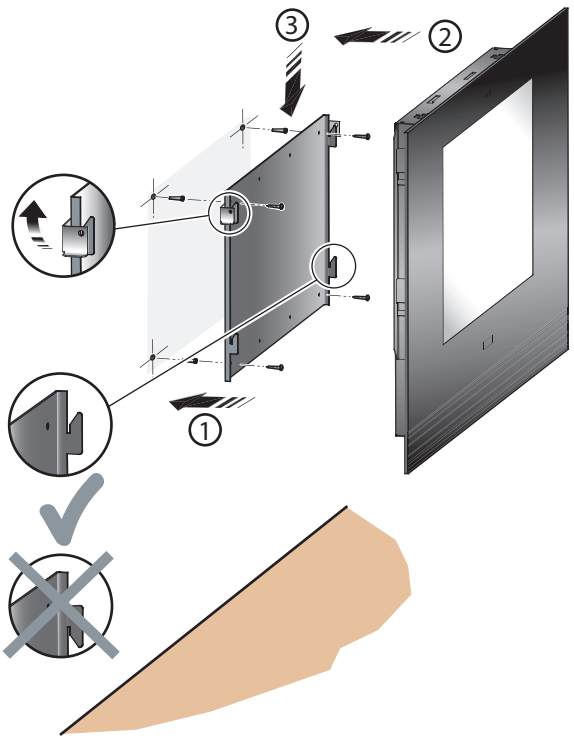

4

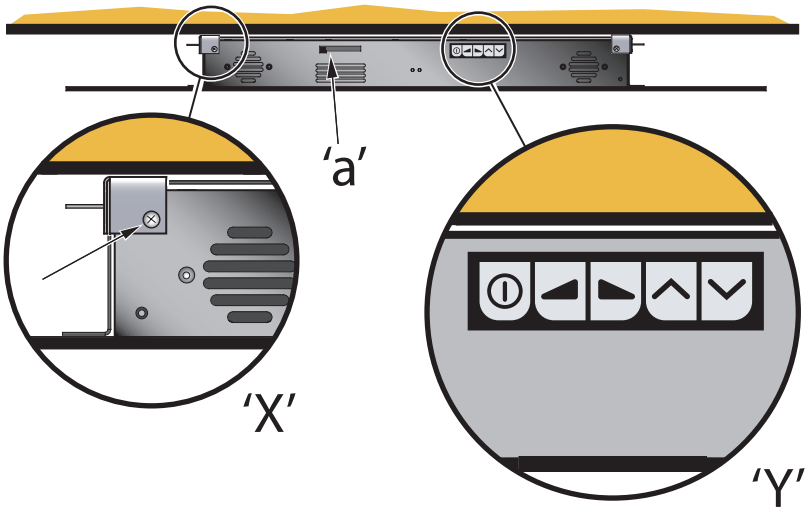

5

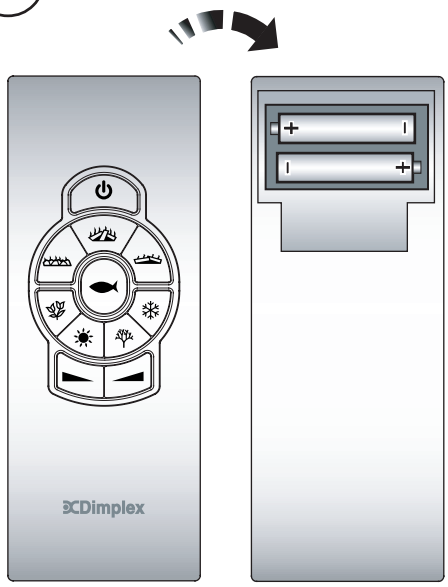

6

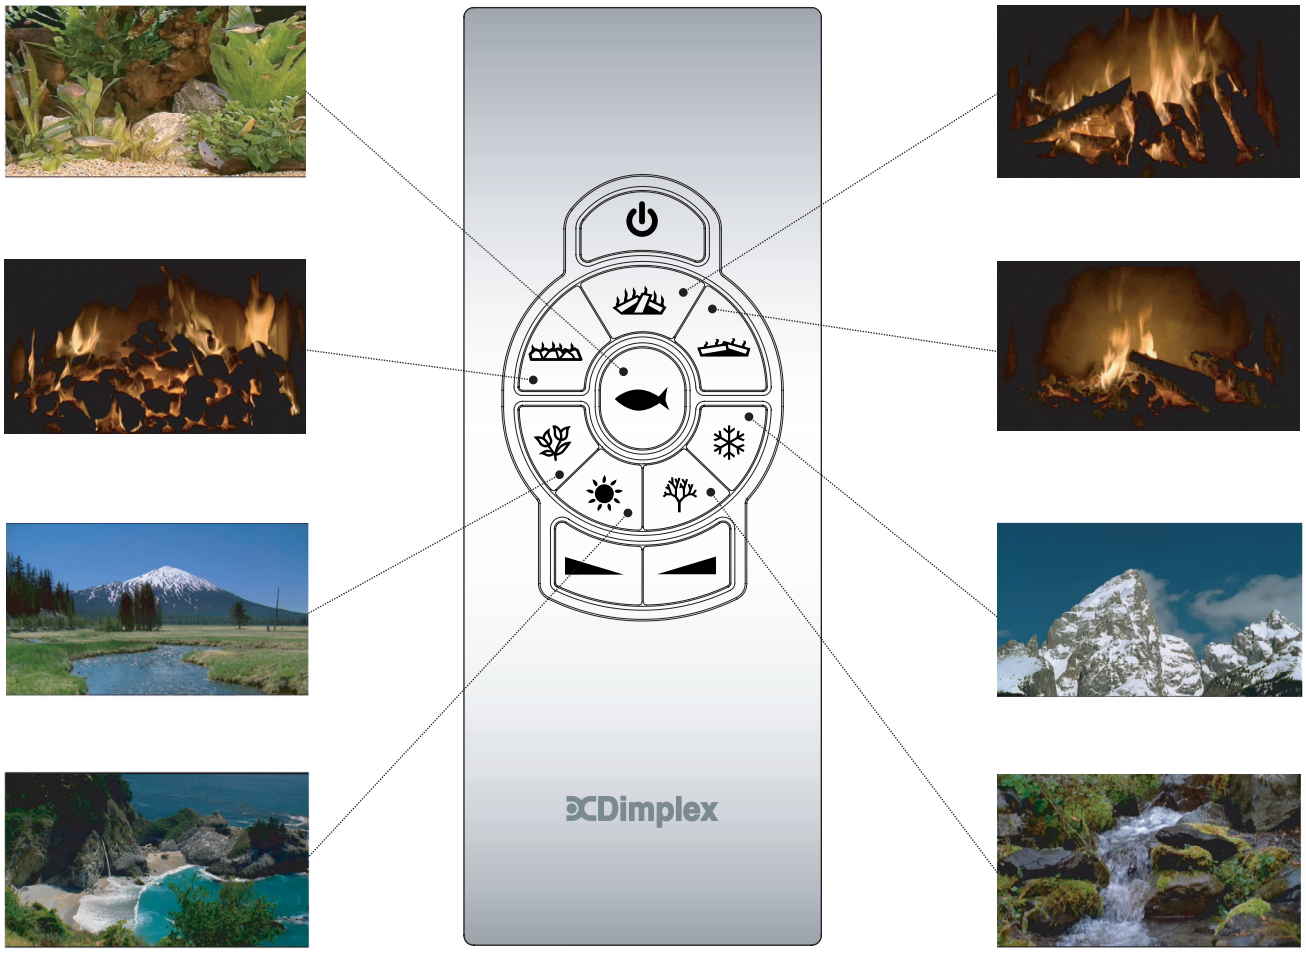

Living Art Range
Model(s): LVA231 & LVA232

IMPORTANT: THESE INSTRUCTIONS SHOULD BE READ CAREFULLY AND RETAINED FOR FUTURE REFERENCE

Important Safety Advice

When using electrical appliances, basic precautions should be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

If the appliance is damaged, check immediately with the supplier before installation and operation.

Do not use this appliance in the immediate surroundings of a bath, shower or swimming pool.

Do not use outdoors.

Do not cover or obstruct the appliance in any way. Overheating will result if it is accidentally covered.

In the event of a fault switch off the appliance.

Switch off the appliance when not required for long periods.

This appliance is not intended for use by children or other persons without assistance or supervision if their physical, sensory or mental capabilities prevent them from using it safely. Children should be supervised to ensure that they do not play with the appliance.

If the supply cord is damaged it must be replaced by the manufacturer or service agent or similarly qualified person in order to avoid a hazard.

Electrical

WARNING – THIS APPLIANCE MUST BE EARTHED

This appliance must be used on an AC ~ supply only and the voltage marked on the appliance must correspond to the supply voltage.

Do not switch the appliance on until properly installed. Please read all the safety warnings and operating instructions.

General

Unpack the appliance carefully and retain the packaging for possible future use, in the event of moving or returning the appliance to your supplier.

Contents of Carton

- Living Art Range Model
- Wall fixing plate (attached to chassis for transit)
- Fixing screws and wall plugs
- Remote control and batteries (AAA type)
- Cable and plug

Do not connect the appliance to an electricity supply until it is installed on a wall correctly - see ‘Installation’.

The appliance can be operated remotely or manually - see ‘Operation’.

General features of the remote control are:

- Selection of 8 different scenes.
- Sound effects relevant to your selected scene may be activated and the volume increased or decreased.
- Switch off to Standby.

Installation

Do not connect appliance until properly fixed to the wall and the Instruction leaflet is read fully.

For installation of the appliance, care must be taken not to damage any cables that may be concealed in the wall.

Please be careful while drilling the holes.

These models are designed to be permanently wall mounted - see **Fig. 1** for recommended fixing dimensions from floor to underside of the appliance for optimum viewing of the display screen. The outline of the chassis and the position of the electrical socket are shown as dotted outlines in **Fig. 1**. Any dimensions indicated ‘*’ are recommended dimensions.

The wall plate is secured to the chassis with 2 screws (see detail view ‘X’ in **Fig. 4**). To wall mount the appliance first remove the wall plate from the chassis by removing the two screws and rotating the corner hinges away from the chassis. Note : Retain the two screws for future use.

Fix the wall plate to the wall using the wall plugs and screws provided. (Note: Ensure that the wall is suitable for the screws & plugs provided).

Use the wall plate as a template to mark the hole positions for drilling - see **Fig. 2**. Drill and fix the wall plate in position with one screw initially to check the plate is level before marking and drilling the remaining holes - see ‘1’ in **Fig. 3**. Ensure the wall plate is fitted the correct way up i.e. the side hooks are pointed upwards - see **Fig. 3**.

The appliance can then be fitted to the wall plate by aligning the slots on the chassis with the side hooks on the wall plate. This is best achieved by positioning the appliance vertically above the plate (see ‘2’ in **Fig. 3**) and locating on the side hooks and sliding the chassis downwards (see ‘3’ in **Fig. 3**).

The corner hinges on the wall plate may be used to secure the appliance against inadvertent dislodgement. Simply rotate the hinges upwards (see **Fig. 2** and detail view in **Fig. 3**) to a position above the chassis. They can then be screw fixed using the screws removed earlier (see detail view ‘X’ in **Fig. 4** of corner hinge rotated up and screw fixed in position).

The appliance should not be connected until the instruction leaflet is read fully.

NOTE: The appliance should be ‘HARD’ wired to a fused switched spur located behind the glass screen so as to be hidden from view - see ‘d‘ in **Fig. 1**. The cable should be shortened as necessary in order to remain concealed behind the glass display screen.

Please consult a qualified electrician for appropriate wiring requirements.

Operation

Plug in the connector from the electrical hard wiring outlet to the appliance. The illuminated Power 'On' switch (see 'c' in **Fig. 1**) must first be turned 'ON' to operate the appliance either manually or by remote control.

Ensure the memory card is pressed down in position. If required the card can be removed by simply pressing down on the button beside the card on top of the appliance to eject it (see 'a' in **Fig. 1** and **Fig. 4**).

The 'Coal' scene will automatically come on when the Power 'On' button is switched on.

Manual Controls

The manual controls are located on top of the appliance behind the glass screen (see 'b' in **Fig. 1**). See also detail view 'Y' in **Fig. 4**).

For description of manual button settings see below:

Standby Switch 'On' / 'Off'

Audio volume 'Down'

Audio volume 'Up'

Scene selection 'Up'

Scene selection 'Down'

Remote Control

The remote control may be operated once the appliance is switched 'ON'. Select any one of eight scenes on your remote control - see **Fig. 6**. Each scene has it's own particular sound effect which may be activated and adjusted by pressing the audio volume control buttons (and) to the level required.

See below for button settings on remote control for various scene selections:

'Coal' Fire scene

'Log' Fire scene

'Embers' Fire scene

'Spring' scene

'Summer' scene

'Autumn' scene

'Winter' scene

'Aquarium' scene

The appliance may be switched into Standby mode by pressing the Standby On/Off button.

Note: The user may notice a slight frame freeze lasting less than 0.5 seconds after a scene has run for approximately 5 minutes.

This is normal and should not be a cause for concern.

Remote Control Assembly

Note: The remote control is packed separately in the carton.

1. Slide open the battery cover on the back of the remote transmitter.
2. Install the AAA batteries into the remote control (see **Fig. 5**).
3. Replace battery cover.

Discard Leaking Batteries

Dispose of batteries in the proper manner according to Provincial and local regulations. Any battery may leak electrolyte if mixed with a different battery type, if inserted incorrectly, if all the batteries are not replaced at the same time, if disposed of in a fire or if an attempt is made to charge a battery not intended to be recharged.

Recycling

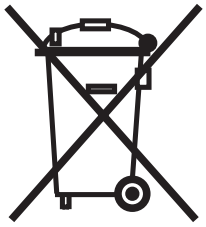

For electrical products sold within the European Community.

At the end of the electrical products useful life it should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice in your country.

Cleaning

WARNING – ALWAYS DISCONNECT FROM THE POWER SUPPLY BEFORE CLEANING THE APPLIANCE.

For general cleaning use a soft clean duster – never use abrasive cleaners. The glass viewing screen should be cleaned carefully with a soft cloth. DO NOT use proprietary glass cleaners.

After Sales Service

Your product is guaranteed for one year from the date of purchase.

Within this period, we undertake to repair or exchange this product free of charge (subject to availability) provided it has been installed and operated in accordance with these instructions.

Your rights under this guarantee are additional to your statutory rights, which in turn are not affected by this guarantee.

Should you require after sales service you should contact our customer services help desk on 0870 727 0101. It would assist us if you can quote the model number, series, date of purchase, and nature of the fault at the time of your call. The customer services help desk will also be able to advise you should you need to purchase any spares.

Please do not return a faulty product to us in the first instance as this may result in loss or damage and delay in providing you with a satisfactory service.

Please retain your receipt as proof of purchase.

Glen Dimplex UK Limited
Millbrook House
Grange Drive
Hedge End
Southampton
Hampshire. SO30 2DF

UK customer help line (8.00AM – 6.00PM Mon-Fri; 8.30AM-1.00PM Sat)

Customer Services:	Tel.	0870 7270101
	Fax.	0870 7270102
	e-mail	customer.services@glendimplex.com
Republic of Ireland	Tel.	01 8424833

[c] Glen Dimplex UK Limited
All rights reserved. Material contained in this publication may not be reproduced in whole or in part, without prior permission in writing of Glen Dimplex UK Limited.